


**INTERIOR FLOORS**

Gypsum Self-Leveling Underlayment, On-Ground  
or Above-Ground  
Cementitious Self-Leveling Underlayment  
Skim Coat (As Necessary)

**Gypsum SLU Substrate for LVP**

MAPEI: MFC-F205/F205A-GLVP

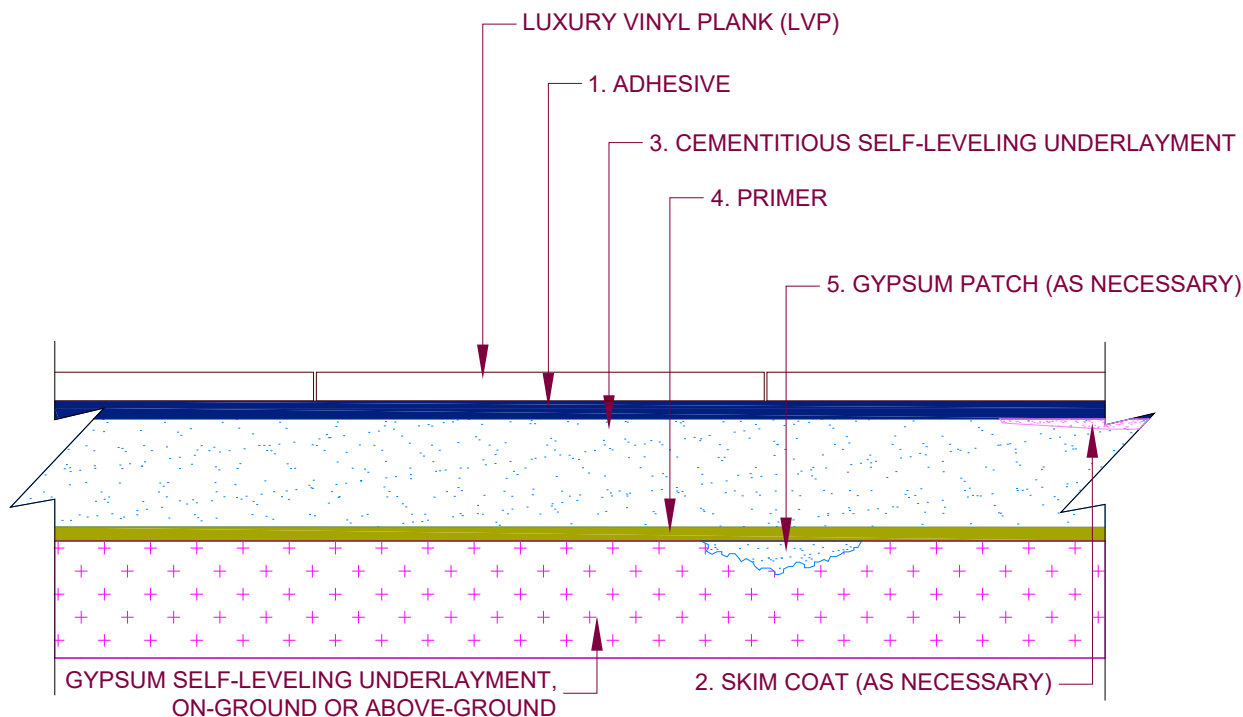

SCALE: N.T.S.

**MAPEI Product Assembly**

- |                                                                                                                                                                                                                                                                                                                    |                                                                                                                                                    |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>1. Adhesive:</b><br/>A. <i>Ultrabond ECO® 399</i></p> <p><b>2. Skim Coat (As Necessary):</b><br/>A. <i>Planipatch®</i><br/>B. <i>Planiprep® PSC</i></p> <p><b>3. Cementitious Self-Leveling Underlayment:</b><br/>A. <i>Novoplan® 2 Plus</i><br/>B. <i>Novoplan® HFL</i><br/>C. <i>Ultraplan® 1 Plus</i></p> | <p><b>4. Primer:</b><br/>A. <i>Primer L™</i><br/>B. <i>Primer T™</i></p> <p><b>5. Gypsum Patch (As Necessary):</b><br/>A. <i>Planitex® UNS</i></p> |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|

**Ultrabond ECO 399:** Follow the flooring manufacturer's installation instructions and guidelines regarding adhesive application rate and method (i.e., wet set, semi-wet set, dry/pressure sensitive).

This drawing and instructions are provided as a guide for informational purposes only and are not intended to replace sound engineering practice and judgment and should not be relied upon for that purpose. MAPEI products are listed as options. Please refer to current data sheets for complete instructions and application limitations. Some installation methods and component materials are not referenced. MAPEI encourages the user to consult all approved resources to ensure a complete assembly.

